

TO REMOVE SCREENS:

1. PULL SASH CLIPS (ONE ON BOTH SIDES OF MIDDLE SASH) OUT.
2. PUSH LOWER SASH UP AS FAR AS IT CAN GO.
3. PUSH LOWER SASH ALL THE WAY TO ONE SIDE OF MIDDLE SASH (THIS WILL ALLOW THE LOWER SASH TO BE REMOVED)
4. COMPLETELY REMOVE THE LOWER SASH.
5. PULL SCREEN OUT FROM THE TOP (A SCREW DRIVER MAY BE NEEDED).

